

GEEPAS[®]

CITRUS JUICER



Please read the manual fully before using the product. Please keep the manual safe for future reference.

MODEL NO.: GCJ46012UK
www.geepas.co.uk

Dear Customer,

You are now a proud owner of a Geepas product. Let's welcome you to the Geepas customer family. We hope you will be happy using it as millions of our satisfied customers already are. Our products continue to be the favorites on account of their superior quality, reliability and performance.

In order to provide you the ultimate satisfaction, the minutest part of each product is thoroughly tested and examined under stringent conditions. The objective of Geepas is to bring cutting edge technology to your everyday life.

In the unlikely event that the product needs warranty service, please refer the enclosed warranty card.

Although it is highly improbable, yet in case you have any issues with the product kindly contact your nearest Geepas dealer or get in touch with us directly. We assure you that an appropriate action would be taken as per our customer service policy.

Before you start enjoying the product we strongly urge you to spare a few minutes to go through this manual so that you may derive the maximum benefits out of the product.

General Safety Guidelines

Read the user manual before operating any appliance or equipment.

1. Do not operate any equipment with a damaged power cord.
2. Check the voltage available at your home and ensure that it matches with the voltage mentioned on your appliance before switching it on.
3. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under supervision or have been given correct and necessary instructions.
4. Always keep the unit on a dry and flat surface.
5. Never touch any appliance or equipment with wet or damp hands.
6. While plugging or unplugging a power cord, hold it by the plug, never pull the cord.
7. Do not use any attachments other than the ones supplied by or specified by the manufacturer.
8. Never leave the unit unattended while in operation especially, when children are around.
9. The equipment are for household use only. Do not use it for commercial purposes.
10. All appliances and equipment are designed for indoor use. Do not use them outdoors unless specifically mentioned in the instruction manual.
11. Do not connect the equipment to an extension cord or a multiple socket adaptor. Always connect the unit to the main socket; this is to prevent short circuits and sparks, which can shorten the life of the unit and prove risky for your life.
12. Do not let the power cord to hang over the edge of the table or work surface since a sharp edge can damage the cable over a period of time. Do not let it get tangled or come into contact with a hot surface.
13. Do not attempt to repair the unit in case of any malfunction. Always take it to an authorized service center.
14. Always unplug the unit from the power source during lightning and thunderstorms, or when the unit is not going to be used for a long period of time.
15. To avoid risk of electric shocks, do not immerse the equipment in water or use it in damp conditions.
16. The unit should be cleaned with a damp cloth and immediately wiped dry. Do not use detergents or chemical cleaning agents to clean the unit.
17. Always clean cooking appliances soon after use. This will prevent food from sticking to the unit and the possible bacterial growth.
18. If the power cord is damaged, please get it replaced at the service center or by a person who is designated by the manufacturer or a qualified person, in order to avoid electric shock.


إرشادات السلامة العامة

اقرأ دليل المستخدم قبل تشغيل أي جهاز

١. لا تقم بتشغيل أية أجهزة بسلك طاقة تالف.
٢. تحقق من الفولتية المتوفرة في منزلك وتأكد من مطابقتها للجهد المذكور على الجهاز قبل تشغيله.
٣. لا يجوز استخدام الجهاز من قبل الأشخاص (بالإضافة للأطفال) بقدرات مادية أو حسية أو عقلية منخفضة، أو عدم وجود خبرة ومعرفة، إلا إذا كانوا موجودين تحت إشراف أو تم إعطاء التعليمات الصحيحة والضرورية.
٤. احتفظ بالوحدة دائماً على سطح جاف ومسطح.
٥. لا تلمس أبداً أي جهاز بأيدي مبللة أو رطبة.
٦. أثناء توصيل سلك الطاقة أو فصله، احتفظ به بواسطة القابس، ولا تسحب سلك الكبل.
٧. لا تستخدم أي مرفقات بخلاف المرفقات المقدمة من قبل الشركة المصنعة أو المحددة منها.
٨. لا تترك الوحدة دون مراقبة أثناء تشغيلها خصوصاً عندما يكون الأطفال حولها.
٩. المعدات للاستخدام المنزلي فقط. لا تستخدمها لأغراض تجارية.
١٠. جميع الأجهزة والمعدات مصممة للاستخدام في الأماكن المغلقة. لا تستخدمها في الهواء الطلق ما لم يذكر على وجه التحديد في دليل التعليمات.
١١. لا تقم بتوصيل الجهاز بسلك توصيل أو بمحول مقبس متعدد. قم دائماً بتوصيل الوحدة بالمقبس الرئيسي؛ هذا هو لمنع الدوائر القصيرة والشرر، والتي يمكن أن تقصير عمر الوحدة وتثبت خطراً على حياتك.
١٢. لا تدع سلك الكهرباء معلقاً على حافة الطاولة أو سطح العمل نظراً لأن الحافة الحادة قد تؤدي إلى تلف الكابل على مدى فترة زمنية. لا تدعها تتشابك أو تتلامس مع سطح ساخن.
١٣. لا تحاول إصلاح الوحدة في حالة حدوث أي عطل. خذها دائماً إلى مركز خدمة معتمد.
١٤. قم دائماً بفصل الوحدة عن مصدر الطاقة أثناء الصواعق والعواصف الرعدية، أو عند عدم استخدام الوحدة لفترة طويلة من الزمن.
١٥. لتجنب خطر التعرض للصدمات الكهربائية، لا تغمس المعدات في الماء أو لاتستخدمها في ظروف رطبة.
١٦. يجب تنظيف الوحدة بقطعة قماش رطبة ومحوها على الفور. لا تستخدم المنظفات أو مواد التنظيف الكيميائية لتنظيف الوحدة.
١٧. قم دائماً بتنظيف أجهزة الطهي بعد الاستخدام. هذا يمنع الطعام من الالتصاق بالوحدة والنمو البكتيري المحتمل.
١٨. في حالة تلف سلك الطاقة، يرجى استبداله في مركز الخدمة أو عن طريق شخص معين من قبل الشركة المصنعة أو شخص مؤهل، لتجنب الصدمات الكهربية.

Structure Illustration

- A. Cup cover B. Extractor C. Fix Filter
D. Cup E. Axis F. Body

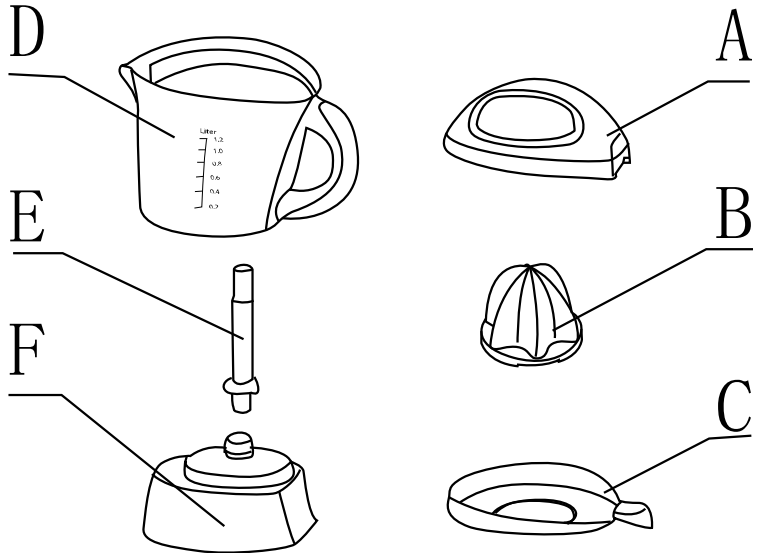

BEFORE FIRST USE

Read and follow all the instructions in this “Use and Care” even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning “IMPORTANT SAFEGUARDS” statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of Experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children's should be supervised to ensure that they do not play with the appliance.

If power cord is damaged, please replaced by the service centre or the person who designated by the manufacturer or a qualified person to avoid electric shock.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.

- Close supervision is necessary when the product is used by or near children or invalids. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split, particularly where it enters the unit.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Never install the unit where it could be subject to:
 - * Heat sources such as radiators, heat registers, stoves or other products that produce heat.
 - * Direct sunlight
 - * Excessive dust
 - * Mechanical vibration or shock
 - * Lack of ventilation, such as bookcase or cabinet
 - * Uneven surface.

- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Do not use the appliance for other than its intended use.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.

Using Method

- Put out the power wire from the bottom fixed pot, and make power be on, put off the lid, then the machine is on waiting
- Separate the cleaned fruits from the middle and put them on the top of turning blade, press the fruit heavily with hands and make the turning blade turn.
- One hand take the handle of juice cup, the other fix the machinery when put the juice into the cup. Turn the juice cup right to 30 degree and put it up to make the body separated, put the juice into cup. Continue working, must do it according to the contrary above steps
- One hand fix the juice cup, the other one handle the filter firmly, make it to be separated from juice cup completely and turn the filter to make the leaving into rubbish tube when you use this machinery; continue working, must put the filter on the juice cup.
- This appliance has two extracted head, if you extracted big fruit can use extracted cover
- Do not put the whole or parts of body into water
- If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to order to avoid a hazard.


Clean and care

- When you cleaning, please pull the cord first, take filter and separate the move filter, revolve the cup at right direction, pull the transmit axes and cleaning one by one.
- Install step is reverse unpick and wash
- Covered the cup cover and store in ark after cleaning

Technology Parameter

Voltage	:	220-240V
Power	:	25W
Frequency	:	50/60Hz
Capacity	:	1.2L

- A. غطاء كوب B. مستخرج C. ثابت المرشحة
D. كوب E. محور F. جسم

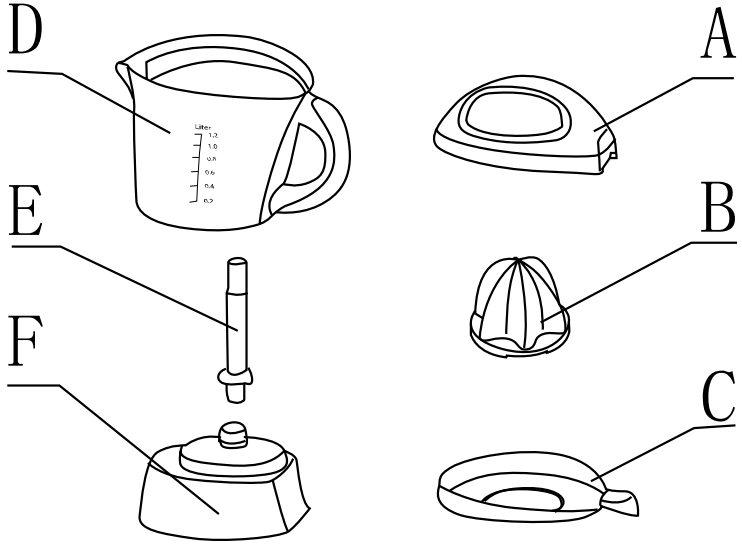

قبل استخدام الاول

اقرأ جميع الإرشادات الواردة في هذا "الاستخدام والرعاية" واتبعها حتى إذا كنت تشعر أنك على دراية بالمنتج ، واعثر على مكان لإبقائه في متناول اليد كمرجع في المستقبل.

يتم توجيه انتباهك بشكل خاص إلى الأقسام المتعلقة ببيانات "تعليمات السلامة المهمة".

لراحتك تسجل رقم الطراز الكامل (الموجود على لوحة تعريف المنتج) والتاريخ الذي تلقيت فيه المنتج ، بالإضافة إلى إيصال الشراء وإرفاقه بالضمان ومعلومات الخدمة. احتفظ بها في حالة طلب خدمة الضمان.

ملاحظة: يعتمد تصنيف هذا المنتج (كما هو موضح على لوحة تعريف المنتج) على

اختبارات تحميل محددة. الاستخدام العادي أو استخدام المرفقات الموصى بها الأخرى قد تستهلك طاقة أقل بشكل ملحوظ.

هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بالإضافة الأطفال) مع قدرات بدنية أو حسية أو عقلية منخفضة أو نقص الخبرة والمعرفة ، ما لم يتم منحهم إشرافاً أو تعليمات بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم. يجب الإشراف على الأطفال للتأكد من أنهم لا يلعبون مع الجهاز. في حالة تلف سلك الطاقة ، يرجى استبداله بمركز الخدمة أو الشخص الذي حدده الصانع أو الشخص المؤهل لتجنب الصدمات الكهربائية.

تعليمات سلامة مهمة

عند استخدام أي منتج يعمل بالطاقة الكهربائية ، ينبغي دائماً اتباع احتياطات السلامة الأساسية ، بما في ذلك ما يلي:
يرجى قراءة جميع التعليمات بعناية قبل استخدام المنتج.
تحذير - لتقليل خطر نشوب حريق أو صدمة كهربائية أو إصابة أشخاص أو ممتلكات:

•قم دائماً بتشغيل المنتج من مصدر طاقة للجهد والتردد والتصنيف نفسه المذكور في لوحة تحديد المنتج.

•الإشراف الدائم ضروري عند استخدام المنتج من قبل أو قرب الأطفال أو المعاقين. لا تسمح للأطفال باستخدامها لعبة.

•لا تقم بتشغيل أي منتج بسلك أو مقبس تالف أو بعد تعطل المنتج أو سقوطه أو تظهره بأية طريقة. يرجى إعادة المنتج الكامل إلى مكان الشراء للتفتيش أو الإصلاح أو الاستبدال.

•لا تقم بتفريق سلك التيار الكهربائي حول الجهاز أو تغليفه حول الجهاز ، حيث قد يؤدي ذلك إلى إضاءة العزل وتقسيمه ، لا سيما عند دخوله إلى الوحدة.

•للحد من مخاطر التعرض لصدمة كهربائية ، لا تغمر أو تعرض المنتج أو سلك مرن للمطر أو الرطوبة أو أي سائل غير تلك الضرورية للتشغيل الصحيح للمنتج.

•لا يستخدم هذا المنتج في المناطق المباشرة للمياه ، مثل حوض الاستحمام ، وأحواض الغسيل ، وحمام السباحة وما إلى ذلك ، حيث يمكن أن يحدث احتمال الغمر أو الترشح.

•لا تقم أبداً بتثبيت الوحدة حيث يمكن أن تخضع لما يلي:

*مصادر الحرارة مثل المشعات ، وسجلات الحرارة ، والمواد أو غيرها من المنتجات التي تنتج الحرارة.

*ضوء شمس مباشر

*الغبار المفرط

*الاهتزاز الميكانيكي أو الصدمة

*عدم وجود تهوية ، مثل خزانة الكتب أو الخزانة

*سطح غير مستوي.

- أوقف تشغيل الجهاز وافصله من المنفذ عندما لا يكون قيد الاستخدام ، قبل تجميع الاجزاء أو تفكيكها وقبل التنظيف. قم بإزالة عن طريق إمسك القابس - لا تسحب على السلك
- لا تستخدم الجهاز بخلاف الاستخدام المقصود.
- قد يسبب استخدام الملحقات أو الملحقات التي لا يوصى بها أو بيعها موزع المنتج خطراً أو إصابات شخصية أو ملكية.

كيفية الاستخدام

- اخرج سلك الطاقة من الوعاء الثابت السفلي ، واجعل الطاقة تعمل ، وأخرج الغطاء ، ثم يكون الجهاز في وضع الانتظار
- قم بفصل الفواكه المنظفة من الوسط وقم بوضعها في أعلى شفرة الدوران ، ثم اضغط على الفواكه بشكل كبير باستخدام الأيدي ثم قم بتدوير الشفرة.
- تأخذ مقبض كوب عصير بيد واحدة ، والآخر في تثبيت الآلات عند وضع العصير في الكأس. قم بتحويل كوب عصير اليمين في 30 درجة ووضعها لجعل الجسم يفصل ، ووضع عصير في الكأس. مواصلة العمل ، يجب أن يفعل ذلك وفقاً لخطوات أعلاه على العكس
- قم بتركيب كأس عصير بيد واحدة ، والآخر واحد للتعامل مع مرشح بحزم ، وجعلها منفصلة عن كوب عصير تماما وتحويل مرشح لجعل ترك في أنبوب القمامة عند استخدام هذه الآلات ؛ مواصلة العمل ، يجب وضع مرشح على كوب عصير .
- هذا الجهاز يحتوي على رأسين مستخلصين ، إذا قمت باستخراج فاكهة كبيرة يمكن استخدام غطاء مستخرج
- لا تضع كامل أو أجزاء الجسم في الماء
- في حالة تلف سلك الكهرباء ، يجب استبداله من قبل مصنع أو وكيل الخدمة الخاص به أو شخص مؤهل بالمثل من أجل طلب تجنب أي خطر .

التنظيف والعناية

- عند التنظيف ، يرجى سحب السلك أولاً ، و الفلتر وفصل فلتر النقل ، وتدوير الكأس في الاتجاه الصحيح ، وسحب محاور الإرسال والتنظيف واحدة تلو الأخرى.
- خطوة التثبيت هي عكس اختيار وغسل
- يغطي غطاء الكوب ويخزن في الفلك بعد التنظيف

معلومات تقنية

الجهد	: 220-240 فولت
الطاقة	: 25 واط
التردد	: 60/50 هيرتز
السعة	: 1.2 لتر

Contact details

Western International Group (UK) Ltd
Unit 27, Kelvin Way Trading Estate,
West Bromwich, Birmingham, B70 7TP,
United Kingdom

Customer Service / Technical Support

Telephone: 01217286969

Email: support@geepas.co.uk

Web: www.geepas.co.uk

*Register online for warranty.

Disposal of the appliance



Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)
This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business user should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



RoHS
Compliant

