

请自行修改对应产品图以及对应型号
说明书尺寸请根据产品自身说明书尺寸进行调节

Here We Show Only Cover Page/first Page. inside Must Be Show/print The Active Instructions. after U Add The Active Instructions. please Send Us By Return Email For Final Confirmation

此设计是封面/第一页，内页必须要有详细的使用说明，有商标的地方必须换成我公司的商标

请把改好的完整的说明书，发电子邮件给我公司以供最后的确认

Cover page

First page

USER MANUAL

GEEPAS[®]
ELECTRIC DOUBLE HOT PLATE



Please read the manual fully before using the product. Please keep the manual safe for future reference.

MODEL NO.: GHP32022UK
www.geepas.co.uk

For you. For life.

Dear Customer,

You are now a proud owner of a Geepas product. Let's welcome you to the Geepas customer family. We hope you will be happy using it as millions of our satisfied customers already are. Our products continue to be the favorites on account of their superior quality, reliability and performance.

In order to provide you the ultimate satisfaction, the minutest part of each product is thoroughly tested and examined under stringent conditions. The objective of Geepas is to bring cutting edge technology to your everyday life.

In the unlikely event that the product needs warranty service, please refer the enclosed warranty card.

Although it is highly improbable, yet in case you have any issues with the product kindly contact your nearest Geepas dealer or get in touch with us directly. We assure you that an appropriate action would be taken as per our customer service policy.

Before you start enjoying the product we strongly urge you to spare a few minutes to go through this manual so that you may derive the maximum benefits out of the product.

1

General Safety Guidelines

Read the user manual before operating any appliance or equipment.

1. Check the voltage available at your home and ensure that it matches with the voltage mentioned on your appliance, before switching it on.
2. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under supervision or have been given correct and necessary instructions.
3. Do not operate any equipment that has a damaged power cord.
4. If the power cord is damaged, please get it replaced at a service center or by a person who is designated by the manufacturer or a qualified person, in order to avoid electric shock.
5. Always keep the unit on a dry and flat surface.
6. Never touch any appliance or equipment with wet or damp hands.
7. While plugging or unplugging a power cord, hold it by the plug; never pull the cord.
8. Do not connect the equipment to an extension cord or a multiple socket adaptor. Always connect the unit to the main socket; this is to prevent short circuits and sparks, which can shorten the life of the unit and prove risky for your life.
9. Do not let the power cord hang over the edge of the table or a work surface as a sharp edge can damage the cable over a period of time. Do not let it get tangled or come into contact with a hot surface.
10. Do not attempt to repair the unit in case of any malfunction, always take it to an authorized service center.
11. Do not use any attachments other than the ones supplied by or specified by the manufacturer.
12. Never leave the unit unattended while in operation especially, when children are around.
13. Children should be supervised to ensure that they do not play with the appliance.
14. The equipment is for household use only, do not use it for commercial purposes.
15. All appliances and equipment are designed for indoor use. Do not use them outdoors unless specifically mentioned in the instruction manual.
16. Always unplug the unit from the power source during lightning and thunderstorms, or when the unit is not going to be used for a long period of time.
17. To avoid risk of electric shocks, do not immerse the equipment in water or use it in damp conditions.
18. The unit should be cleaned with a damp cloth and immediately wiped dry. Do not use detergents or chemical cleaning agents to clean the unit.
19. Always clean cooking appliances soon after use, this will prevent food from sticking to the unit and the possible bacterial growth.
20. WARNING: If the surface is cracked, switch off the appliance to avoid electric shock.

التعليمات العامة للسلامة

اقرأ دليل المستخدم قبل تشغيل أي جهاز .

١. تحقق من الفولتية المتوفرة في منزلك وتأكد من مطابقتها للجهد المذكور على الجهاز ، قبل تشغيله.
٢. لا يجوز استخدام الجهاز من قبل الأشخاص (بالإضافة الأطفال) بقدرات مادية أو حسية أو عقلية منخفضة ، أو عدم وجود خبرة ومعرفة ، إلا إذا كانوا موجودين تحت إشراف أو تم إعطاء التعليمات الصحيحة والضرورية.
٣. لا تقم بتشغيل أية أجهزة لها سلك طاقة تالف.
٤. في حالة تلف سلك الطاقة ، يرجى استبداله من مركز خدمة أو بواسطة شخص معين من قبل الشركة المصنعة أو شخص مؤهل ، لتجنب الصدمات الكهربائية.
٥. احتفظ بالوحدة دائماً على سطح جاف ومسطح.
٦. لا تلمس أبداً أي جهاز بأيدي مبللة أو رطبة.
٧. أثناء توصيل سلك الطاقة أو فصله ، احتفظ به بواسطة القابس ؛ أبداً لا تسحب السلك.
٨. لا تقم بتوصيل الجهاز بسلك توصيل أو بمحول مقبس متعدد. قم دائماً بتوصيل الو حدة بالمقبس الرئيسي ؛ هذا هو لمنع الدوائر القصيرة والشرر ، والتي يمكن أن تقصير عمر الوحدة وتثبت خطراً على حياتك.
٩. لا تدع سلك الطاقة معلقاً على حافة الطاولة أو على سطح العمل لأن الحافة الحادة قد تؤدي إلى تلف الكابل على مدى فترة زمنية. لا تدعها تتشابك أو تتلامس مع سطح ساخن.
١٠. لا تحاول إصلاح الوحدة في حالة وجود أي عطل ، فتأخذ دائماً إلى مراكز خدمة معتمد.
١١. لا تستخدم أي مرفقات بخلاف المرفقات المقدمة من قبل الشركة المصنعة أو المحددة منها.
١٢. لا تترك الوحدة دون مراقبة أثناء تشغيلها خصوصاً عندما يكون الأطفال حولها.
١٣. يجب الإشراف على الأطفال للتأكد من أنهم لا يلعبون مع الجهاز.
١٤. المعدات مخصصة للاستخدام المنزلي فقط ، ولا تستخدمها لأغراض تجارية.
١٥. جميع الأجهزة والمعدات مصممة للاستخدام في الأماكن المغلقة. لا تستخدمها في الهواء الطلق ما لم يذكر على وجه التحديد في دليل التعليمات.
١٦. قم دائماً بفصل الوحدة عن مصدر الطاقة أثناء الصواعق والعواصف الرعدية ، أو عند عدم استخدام الوحدة لفترة طويلة من الزمن.
١٧. لتجنب خطر التعرض للصدمات الكهربائية ، لا تغمس المعدات في الماء أو استخدمها في ظروف رطبة.
١٨. يجب تنظيف الوحدة بقطعة قماش رطبة ومحوها على الفور. لا تستخدم المنظفات أو مواد التنظيف الكيميائية لتنظيف الوحدة.
١٩. قم دائماً بتنظيف أجهزة الطهي بعد وقت قصير من الاستعمال ، الأمر الذي يمنع الغذاء من الوصول إلى الوحدة والنمو البكتيري المحتمل.
٢٠. تحذير: إذا كان السطح متصدعاً ، فقم بإيقاف تشغيل الجهاز لتجنب الصدمات الكهربائية.

Before you start the electric cooker, please read carefully through the instruction manual below. Only then are we able to guarantee trouble free use of the unit. Wrong use and careless handling may cause the unit to malfunction. We are in that cause unable to honour any warranty.

TECHNICAL DATA

220-240V~ 50/60 Hz 2000W

How to use the product

The cooker should be connected to a well unit of 230V or Volt (like show the product) that conforms with the official regulations.

The cooking plates have been equipped with a 6-step switch. The numbers and intermittent points on the rotary controls show the specific way to operate it.

OFF

1=For simmering delicate foods and thickening sauces etc.


2=Slow cooking

3=For simmering large quantities.

4=Shallow frying of meat and pan dishes

5=To bring all dishes to rapid meat

Note: The LED light will go off when the hot plate reaches the selected temperature and will cycles and off to maintain the temperature. These indications are only approximate. The individual steps on the switch may vary for different pots and pans, and also because of what you cook.

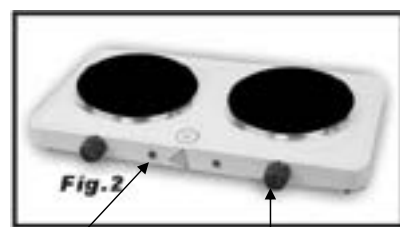

LED light indicator

Rotary controls

The temperature of accessible surfaces may be high when the appliance is operating

This appliance is intended to be used in household and similar applications such as:


- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

BEFORE YOU USE IT FOR THE FIRST TIME

Only use suitable pots and pans

Pots and pans should have flat bottoms in order to transfer heat steadily and to obtain the exact specifications indicated for the temperature controls. The dimension of the pan and the plate should be identical.

This is the right pan. It has a flat Bottom and absorbs the heat of the cooking plate very well

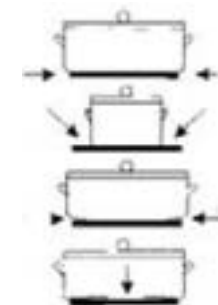

This pan is too small and does not cover the edges, resulting in heat loss.

This pan is not suitable. This transfer of heat between the cooking plate and the pan is poor.

HOW TO OPERATE IT

Cover ought to fit tightly on the respective pot or pan so that no steam can escape

The cooking plate is equipped with a thermostat, which prevents overheating. You should nevertheless always switch off the unit in good time.

Switch the unit off or to a lower level in good time in order to save energy. The cooking plate still will emit intensive heat for a few minutes, which you may use to complete the cooking process.

But the cooking time shall be less than 1 hour

SAFETY TIPS


- The unit is only for use at home and not suited for use in restaurants and for industrial use
- Only use the cooking plates in enclosed spaces
- Never immerse the unit in water.
- Do not use the unit if the cable is damaged or if the cooking plate crack
- Please avoid that the cable gets into contact with the cooking plate.
- Only use the cooking plate on firm and horizontal surfaces. Please avoid using on flammable base (such as covers, plastic materials and the like)
- Children do not know the dangers that may occur when using electric equipment. Please keep children out of reaching of this product
- Please put this user manual in a safe place.
- When this equipment is passed to a third party, then instruction manual should be handed over as well

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

NOTE

**Please do not touch the cooker in operation to avoid being burned!
Please unplug the cooker before wash it!**

• Electrical diagram

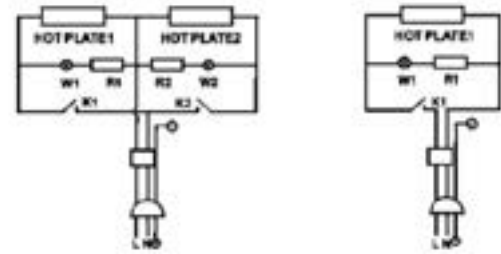

The surfaces are liable to get hot during use.

قبل أن تبدأ في الطبخ الكهربائي ، يرجى قراءة التعليمات بعناية من خلال دليل التعليمات أدناه. عندئذ فقط يمكننا ضمان الاستخدام الخالي من المشاكل للوحدة. قد يؤدي الاستخدام السلس والتعامل اللامبالي إلى تعطل الوحدة. نحن في هذا السبب غير قادر على احترام أي ضمان.

بيانات فنية

واط 2000 هرتز 50/60 ~ فولت 220-240

كيفية استخدام المنتج


يجب توصيل جهاز الطهي بوحدة جيدة 230 فولت (مثل ماذكر على المنتج) يتوافق مع اللوائح الرسمية.

وقد تم تجهيز فرن الكهربائي بمفتاح 6 خطوات. تظهر الأرقام والنقاط المتقطعة على أدوات التحكم الدوارة الطريقة المحددة لتشغيلها.

إيقاف

- 1 = لتغلي الأطعمة الحساسة والصلصات السميكة الخ
- 2 = الطهي البطيء
- 3 = لتغلي كميات كبيرة.
- 4 = قلي اللحم وأطباق الوجبات
- 5 = لإحضار جميع الأطباق لوجبة السريعة

ملاحظة: سينطفئ مصباح LED عندما يصل الفرن الكهربائي إلى درجة الحرارة المختارة وسوف تنتقل وتوقف للحفاظ على درجة الحرارة هذه المؤشرات تقريبية فقط. قد تختلف الخطوات الفردية على المحول لمختلف الأواني والمقالي ، وأيضاً بسبب ما تطبخه.

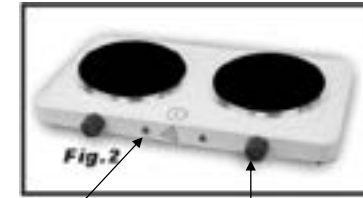

LED مؤشر


تحكم دوار

قبل استخدام في أول مرة

استخدم القدر والمقالي المناسبة فقط

يجب أن تحتوي القوارير والمقالي على قيعان مسطحة من أجل نقل الحرارة بشكل ثابت وللحصول على المواصفات المحددة للتحكم في درجة الحرارة. يجب أن يكون البعد من الوعاء والوحدة متطابقة.

هذه هي المقلاة الصحيحة. لديها شقة أسفل ويمتص حرارة لوحة الطبخ بشكل جيد للغاية
هذا المقلاة صغيرة جده ولا تغطي الحواف ، مما يؤدي إلى فقدان الحرارة.
هذه المقلاة ليست مناسبة.
هذه تنقل الحرارة بين لوحة الطهي والمقلاة سيئة.

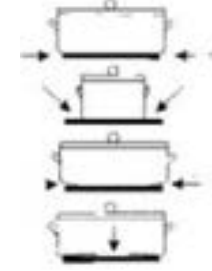

كيفية التشغيل

يجب أن يتناسب الغطاء بإحكام مع الوعاء أو المقلاة بحيث لا يتمكن أي بخار من الهروب صفيحة الطبخ مجهزة بترموستات ، مما يمنع السخونة الزائدة. ومع ذلك ، يجب عليك إيقاف تشغيل الوحدة دائماً في الوقت المناسب.

قم بإيقاف تشغيل الوحدة أو إلى مستوى أقل في الوقت المناسب لتوفير الطاقة. ستظل لوحة الطهي تصدر حرارة مكثفة ليضع دقائق ، والتي يمكنك استخدامها لإكمال عملية الطهي. لكن يجب أن يكون وقت الطهي أقل من ساعة واحدة


نصائح السلامة

- الوحدة مخصصة للاستخدام في المنزل فقط وليست مناسبة للاستخدام في المطاعم وللإستخدام الصناعي
- استخدم أطباق الطبخ في المساحات المغلقة فقط
- لا تغوص الوحدة في الماء.
- لا تستخدم الوحدة إذا كان الكابل تالف أو إذا كانت لوحة الطهي متقطعة
- يرجى تجنب ملامسة الكيل مع لوحة الطهي.
- استخدم لوحة الطهي على الأسطح الصلبة والأفقي فقط. يرجى تجنب استخدام قاعدة قابلة للاشتعال (مثل الأغطية والمواد البلاستيكية وما شابه ذلك)
- الأطفال لا يعرفون المخاطر التي قد تحدث عند استخدام المعدات الكهربائية. يرجى إبقاء الأطفال بعيداً عن الوصول إلى هذا المنتج
- يرجى وضع دليل المستخدم هذا في مكان آمن.
- عندما يتم تمرير هذه المعدات إلى طرف ثالث ، فيجب تسليم دليل التعليمات أيضاً
- هذا الجهاز ليس معداً للاستخدام من قِبل أشخاص (بالإضافة للأطفال) مع قدرات بدنية أو حسية أو عقلية منخفضة أو نقص الخبرة والمعرفة ، ما لم يتم منحهم إشراف أو تعليمات بشأن استخدام الجهاز من قِبل شخص مسؤول عن سلامتهم .
- يجب الإشراف على الأطفال لضمان عدم لعبهم مع الجهاز.
- قد تكون درجة حرارة الأسطح المتاحة عالية عندما يكون الجهاز قيد التشغيل.
- يجب أن تنص التعليمات على أنه لا يُقصد تشغيل الأجهزة عن طريق جهاز توقيت خارجي أو نظام منفصل للتحكم عن بُعد.
- في حالة تلف سلك الكهرباء ، يجب استبداله من قِبل الشركة المصنعة أو وكيل الخدمة الخاص بها أو الأشخاص المؤهلين بشكل مماثل لتجنب أي خطر.

ملاحظة

من فضلك لا تلمس الفرن عند التشغيل لتجنب احراقها!
يرجى فصل الطباخ قبل غسله!

● Electrical diagram

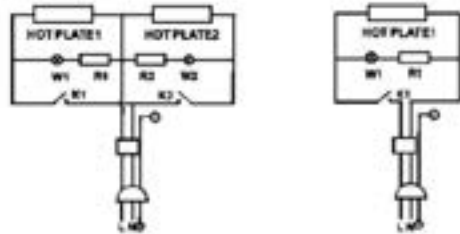

الأسطح عرضة للتسخين أثناء الاستخدام.

قد تكون درجة حرارة الأسطح القابلة للوصول مرتفعة عند تشغيل الجهاز

هذا الجهاز مقصود به الاستعمال المنزلي أو ما مثله من التطبيقات كالتالية:

- * مناطق مطابخ الموظفين بالمحلات والمكاتب وغيرها من البيئات العملية .
- * منازل المزارع .
- * من قبل العملاء في الفنادق والموتيلات ونحوها من نوعية البيئات السكنية .
- * بيئات نوعية السرير والفتور .

Contact details

Western International Group (UK) Ltd
Unit 27, Kelvin Way Trading Estate,
West Bromwich, Birmingham, B70 7TP,
United Kingdom

Customer Service / Technical Support

Telephone: 01217286969

Email: support@geepas.co.uk

Web: www.geepas.co.uk

*Register online for warranty.

Disposal of the appliance



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business user should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

